


Comb Raising Kit Installation Instructions

Instructions for Firearms with Scopes:


- 1) Turn Stock Guard completely inside out. (Rubber should be on outside.)



- 2) Slide large end of Stock Guard over buttstock. (Rubber should still be on outside.) Seam line should be on bottom.




- 3) Pull Stock Guard forward over stock until smaller end covers the pistol grip. Pull Stock Guard back (rightside out) only partially covering the stock.

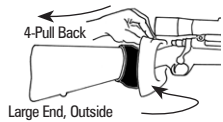

- 4) Insert the combination of cheekpads for desired stock height, then pull stock-guard back over pads, using fingers under neoprene to guide and fit.




- 5) Adjust for perfect fit!

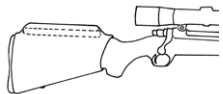

***NOTE-** for use with swivel stud, first unscrew stud, then make small incision in neoprene directly above swivel hole. Make cut just to left or right of seam. **DO NOT CUT INTO SEAM!**

Instructions for Firearms without scopes:


- 1) Slide Stock Guard, large end first, over barrel and back toward pistol grip.

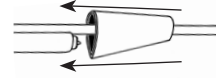


- 2) Adjust small end near pistol grip, then peel back partway, exposing black rubber backing.



- 3) Insert the combination of cheekpads for desired stock height, then pull stock-guard back over pads, using fingers under neoprene to guide and fit.

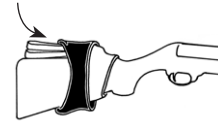

- 5) Adjust for perfect fit!

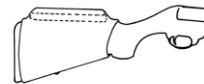

***NOTE-** for use with swivel stud, first unscrew stud, then make small incision in neoprene directly above swivel hole. Make cut just to left or right of seam. **DO NOT CUT INTO SEAM!**

Get the Best.  Get Beartooth.

To see the full range of Beartooth accessories, please visit our web site at:
www.beartoothproducts.com
or call our toll-free number
888-875-BEAR (2327) to order a free product catalog.